





FIRST TIME, READ THIS !! MOUNTING SPIDERCAPO ON THE FINGERBOARD

1. The FINGERS must be Rotated sideways to the "stop" position before Mounting on Guitar.

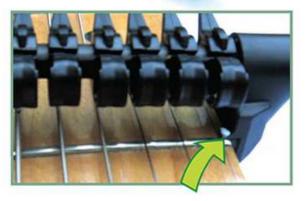

- 2. Place the White TAB behind the fret [shown] for Tunability, or in front for the Tonal Accuracy. The KNOB is on the Bass (thicker) String side.
- 3. Twist the KNOB to make Finger-tight, being sure the TABS are on top of the Fingerboard. Then, tighten... alot! (Pads will protect the neck. You cannot over tighten)

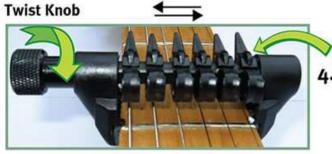

4. NUBS are used to slide the FINGER over the desired string, then use the FINGER HANDLE to rotate & capo.

Note: Lefties must reverse the direction of the FINGERS

Warning: TABS must be placed ABOVE the face of the fingerboard before tightening the KNOB.

TABS alongside the neck can make an indent on the guitar neck when tightened.

Complete info at: www.spidercapo.com